




# Canon EOS 30 Strap Loops Replacement

How to remove strap loops.

Written By: Alexander Gonzalez

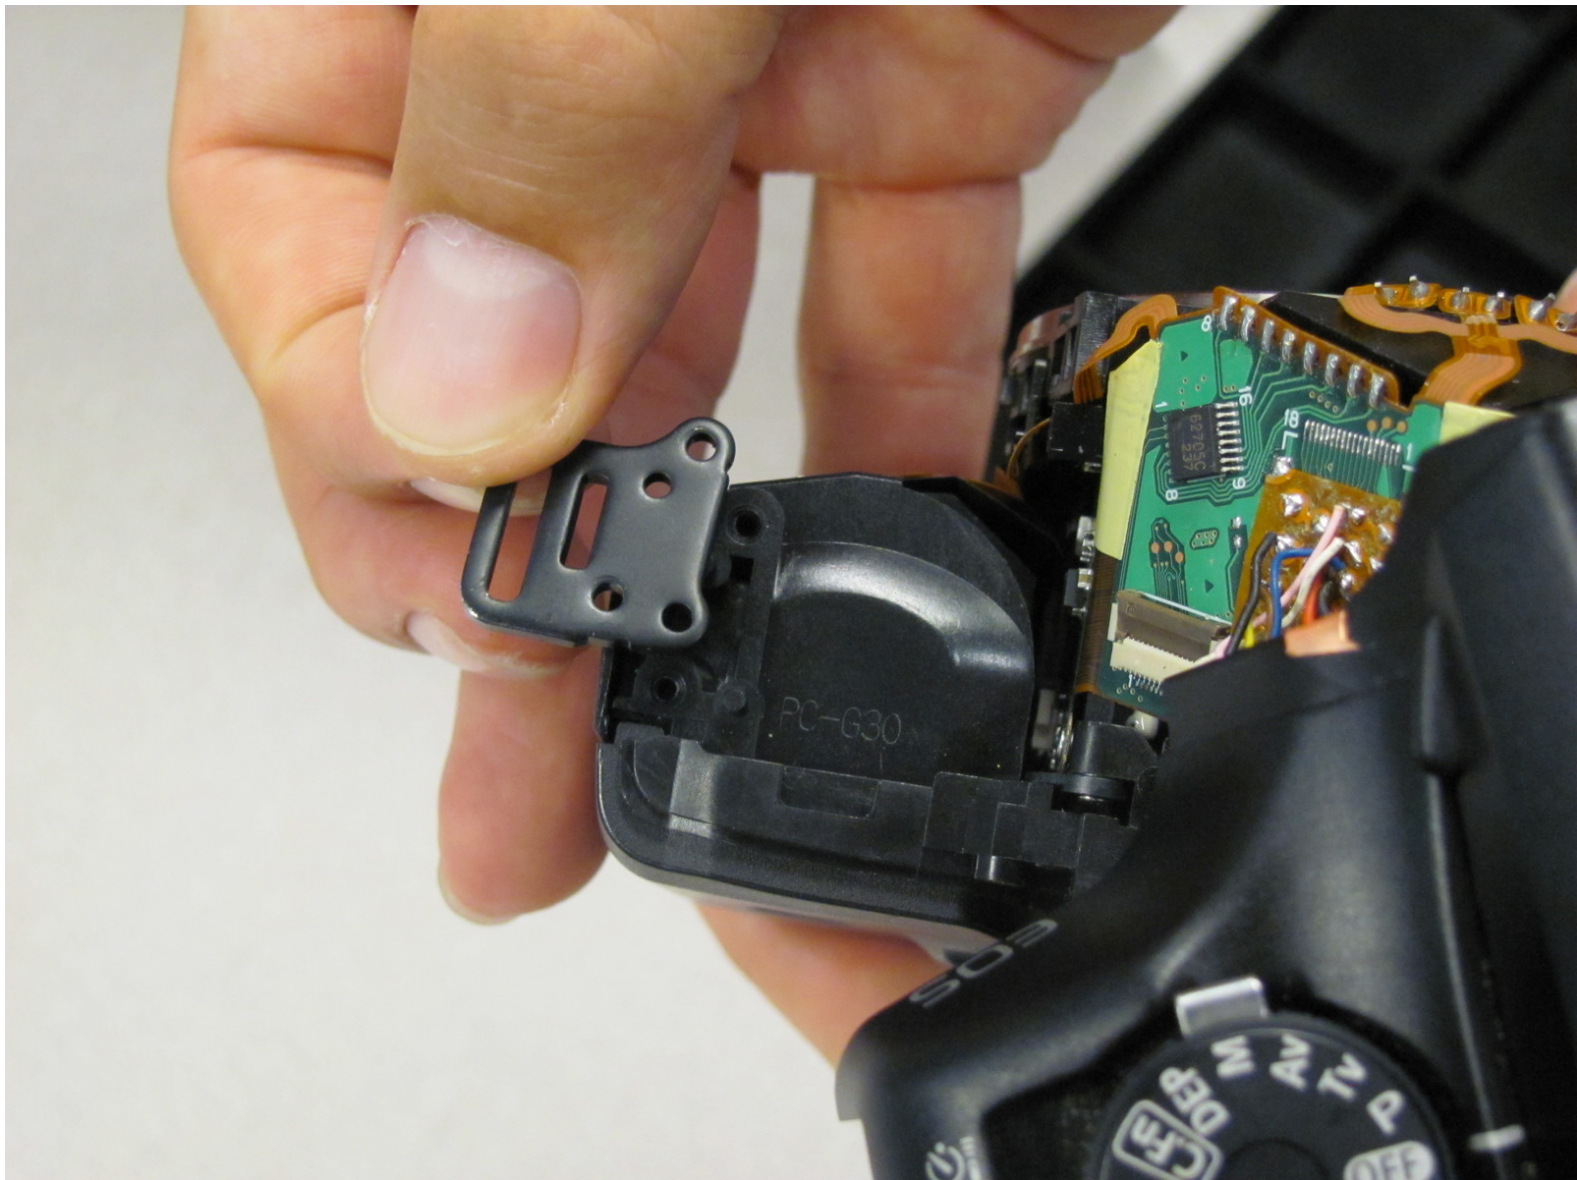

## INTRODUCTION

The strap loops can be safely accessed and removed.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Top Panel



- Slide the outer eyepiece upward to remove it.

## Step 2



- Remove two 4.75 mm Phillips #00 screws from top of camera.



## Step 3




- Remove four 4.3 mm Phillips #00 screws from back of camera.

## Step 4





- Slowly separate top panel from camera by pushing up.
- ⚠ Be careful, as top panel is still attached by wiring and ribbon cable to the camera.

## Step 5

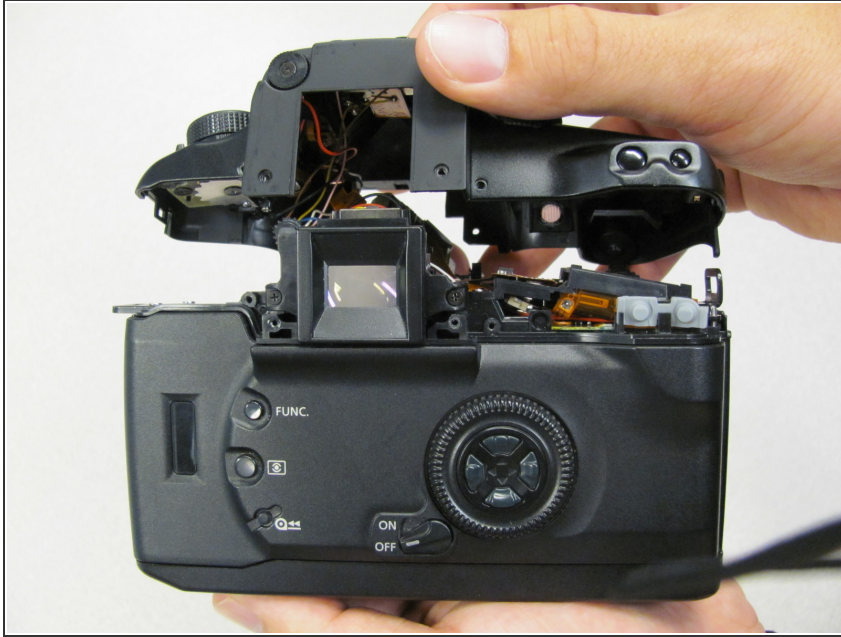

⚠ Separating the top panel too far can damage the connecting wiring.

## Step 6 — Strap Loops

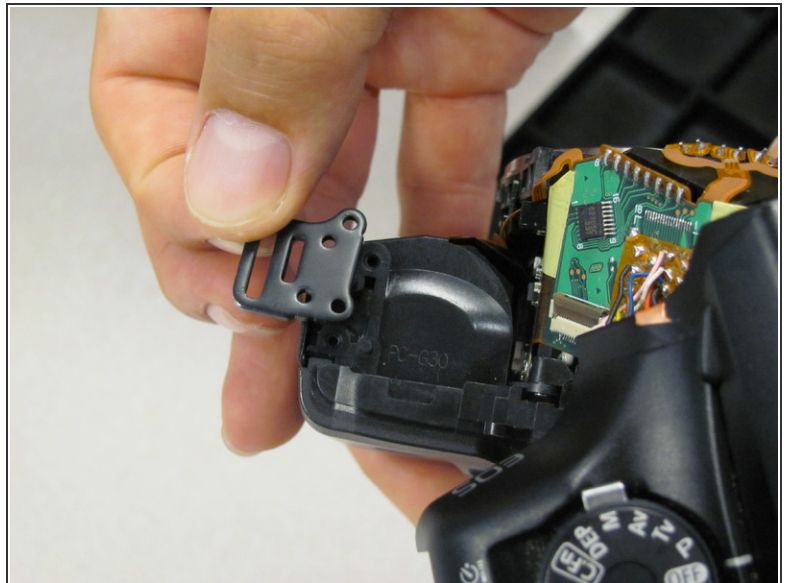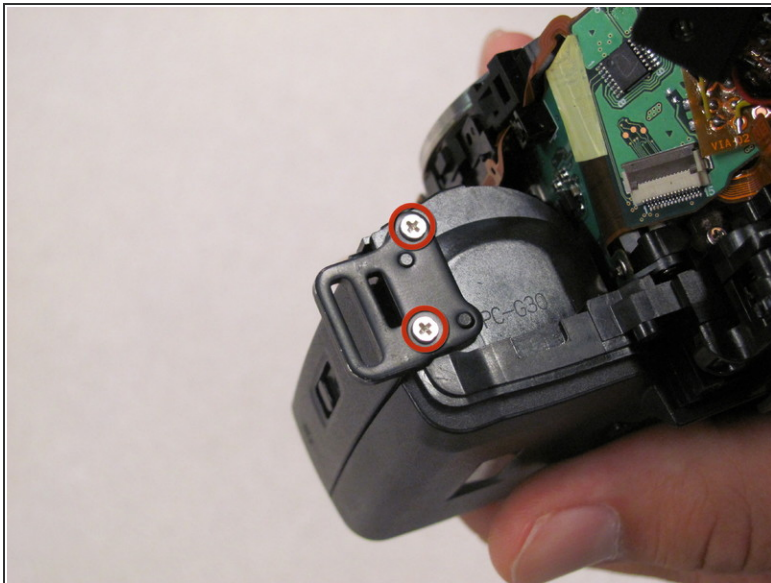

- Remove two 5.9 mm silver screws on top of camera to detach left strap loop (opposite grip).



## Step 7



- Remove one 8.5 mm silver screw (front) and one 5.45 mm silver screw (back) to remove strap loop near LCD screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-29 08:34:14 PM.